

3

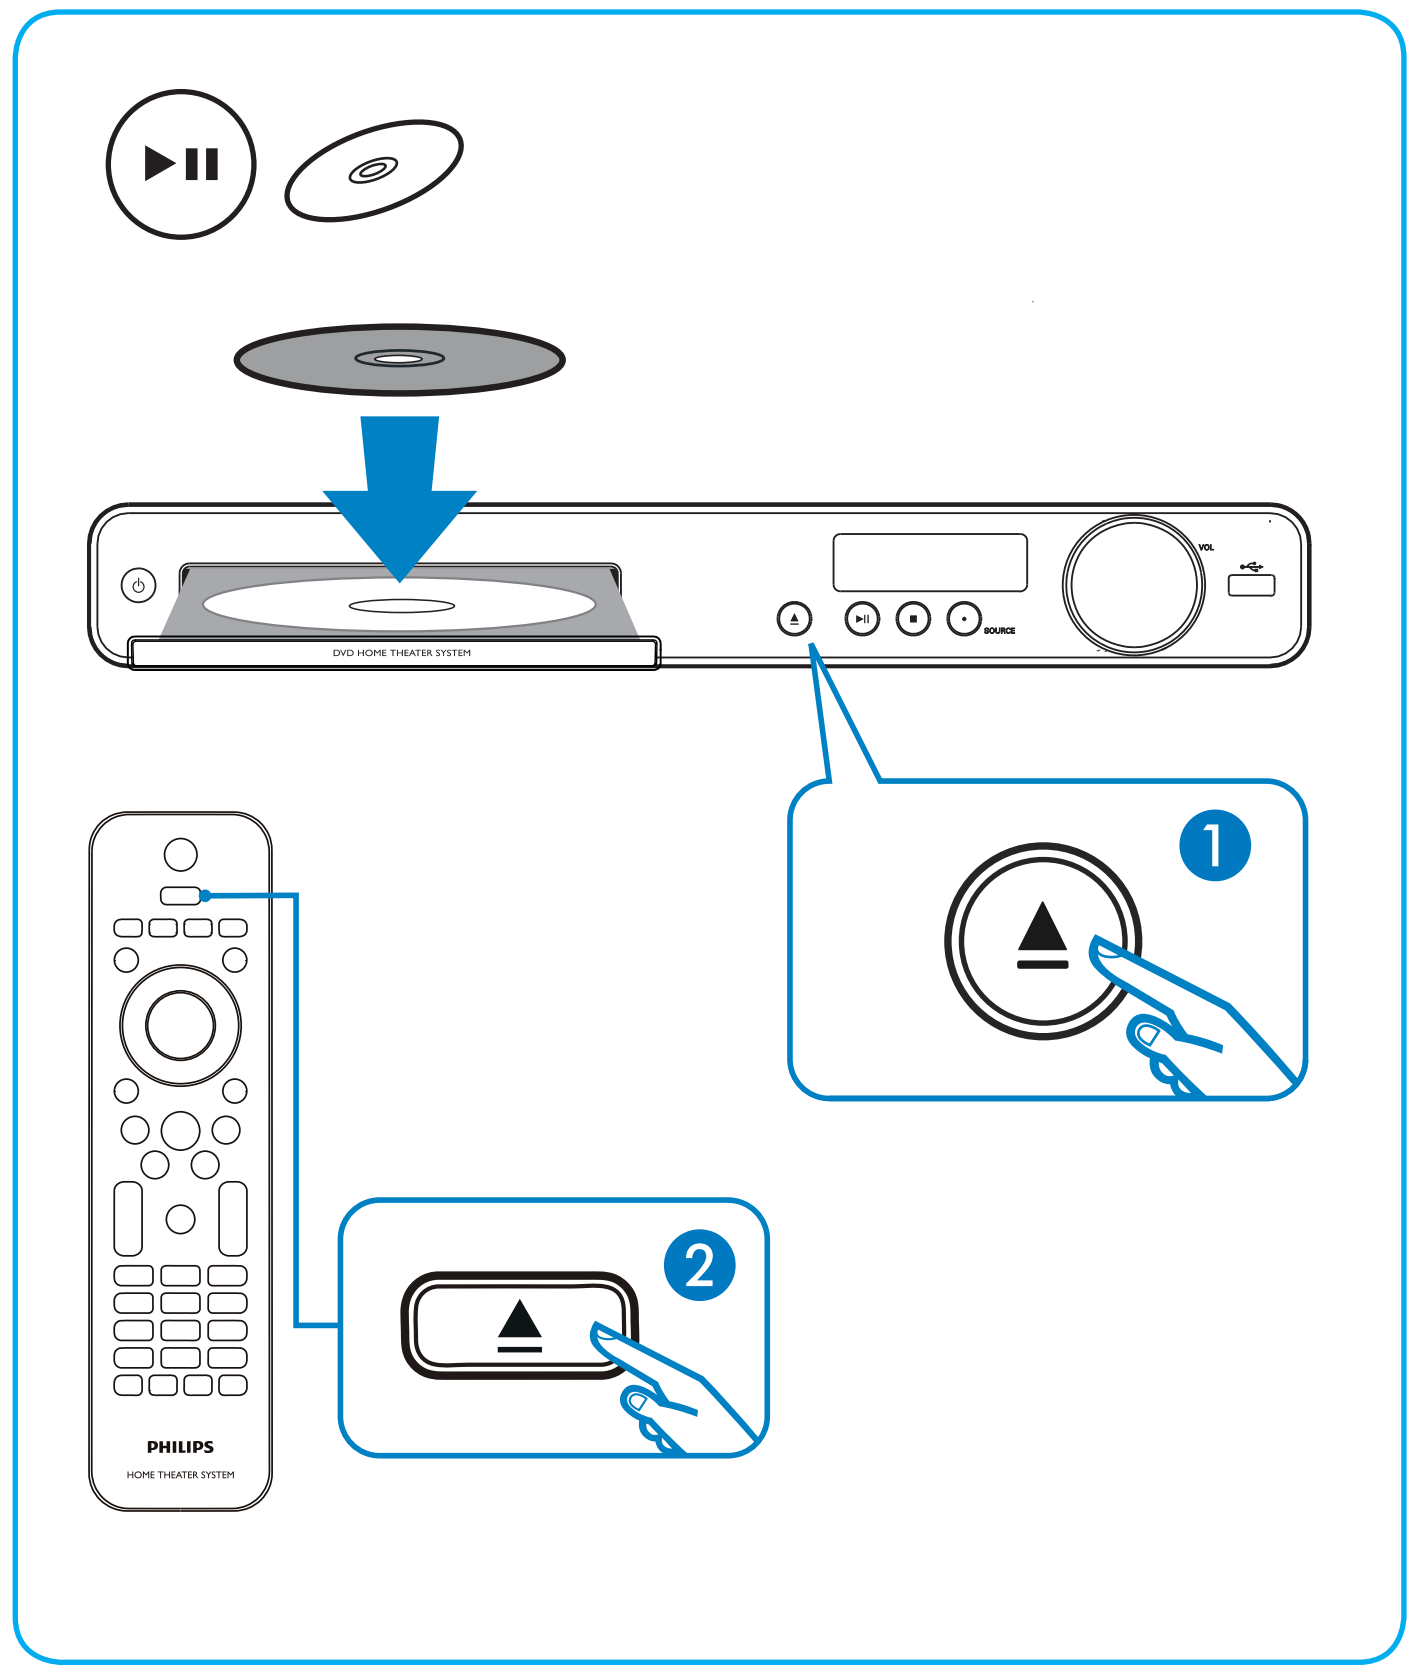

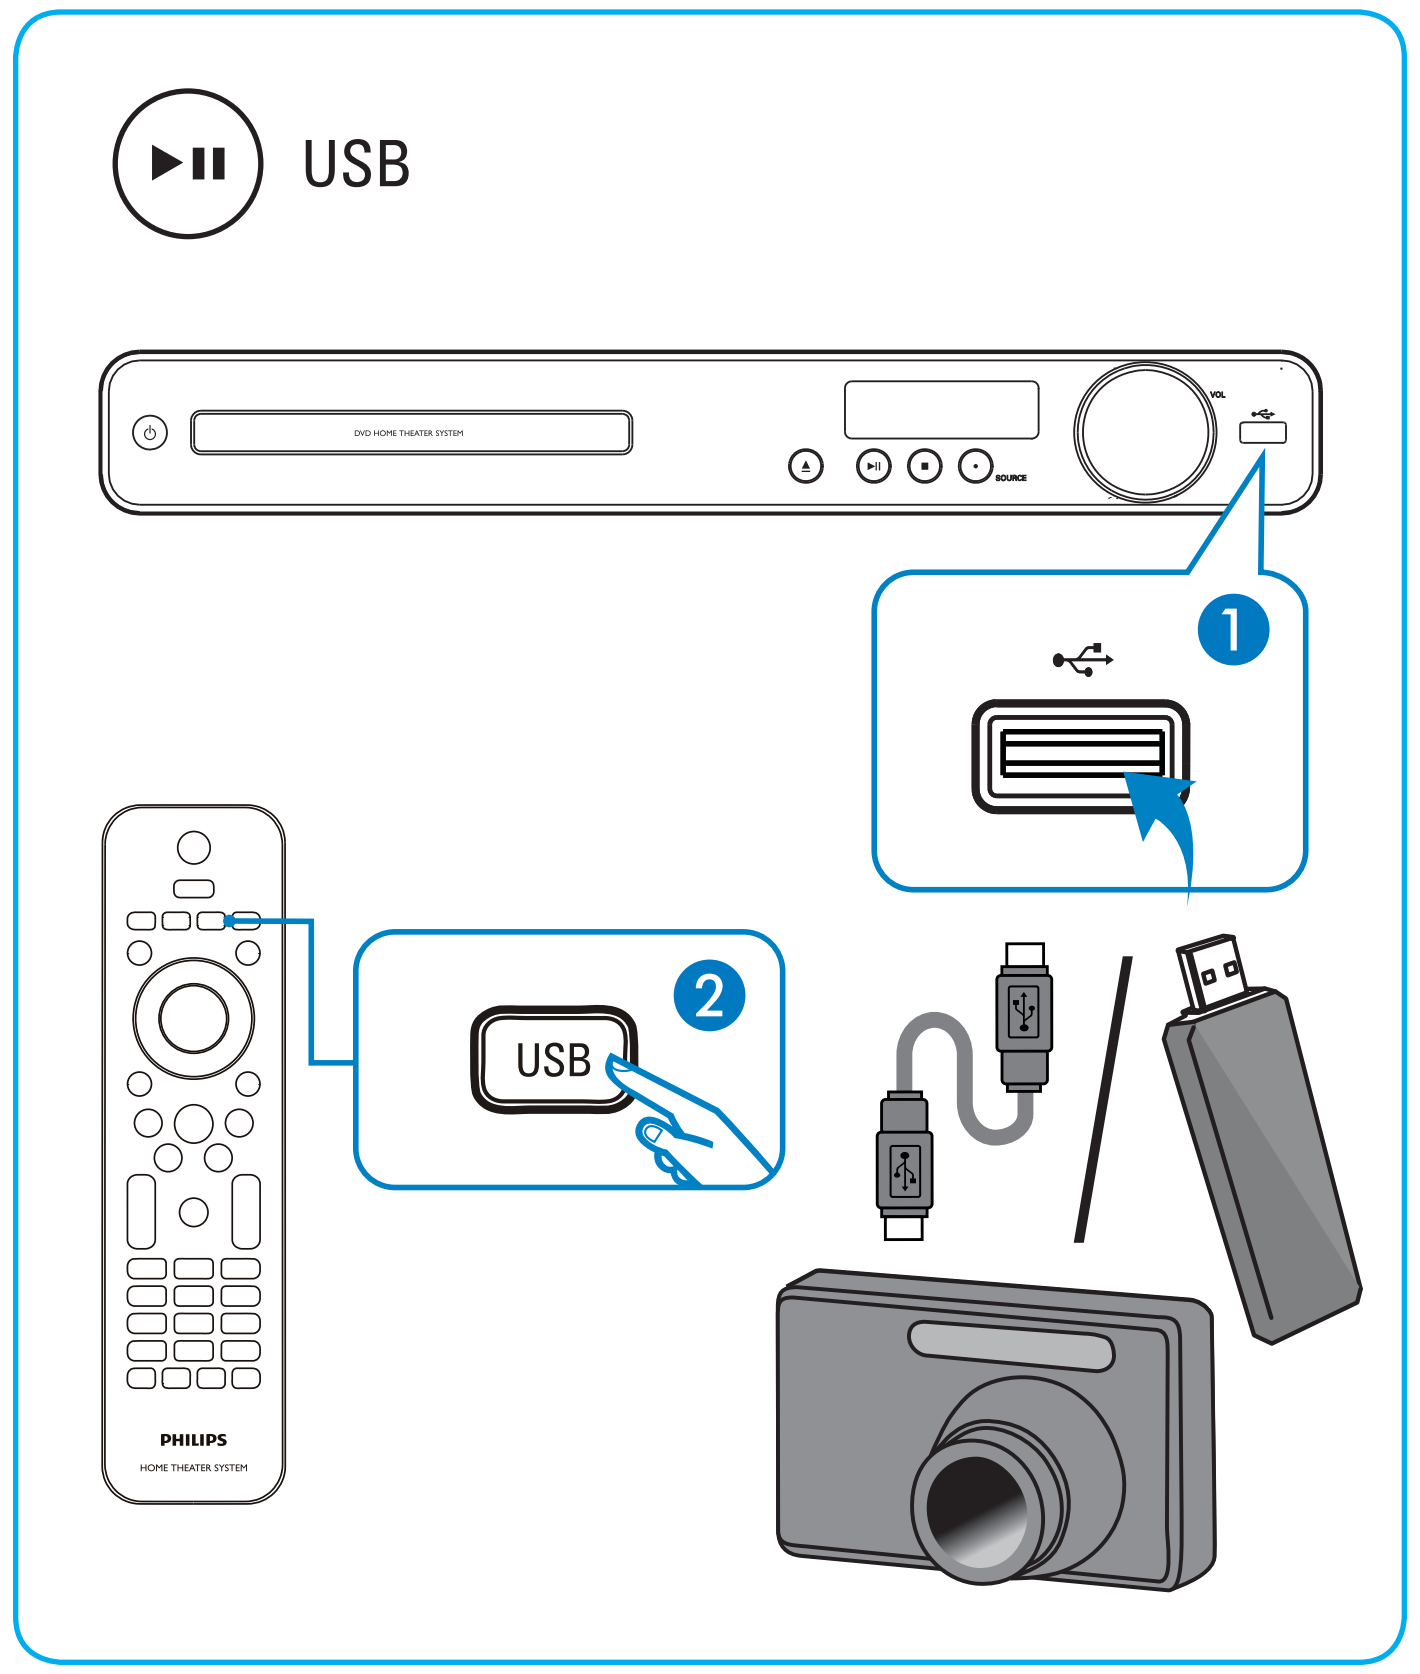


Register your product and get support at
www.philips.com/welcome

HTS3019







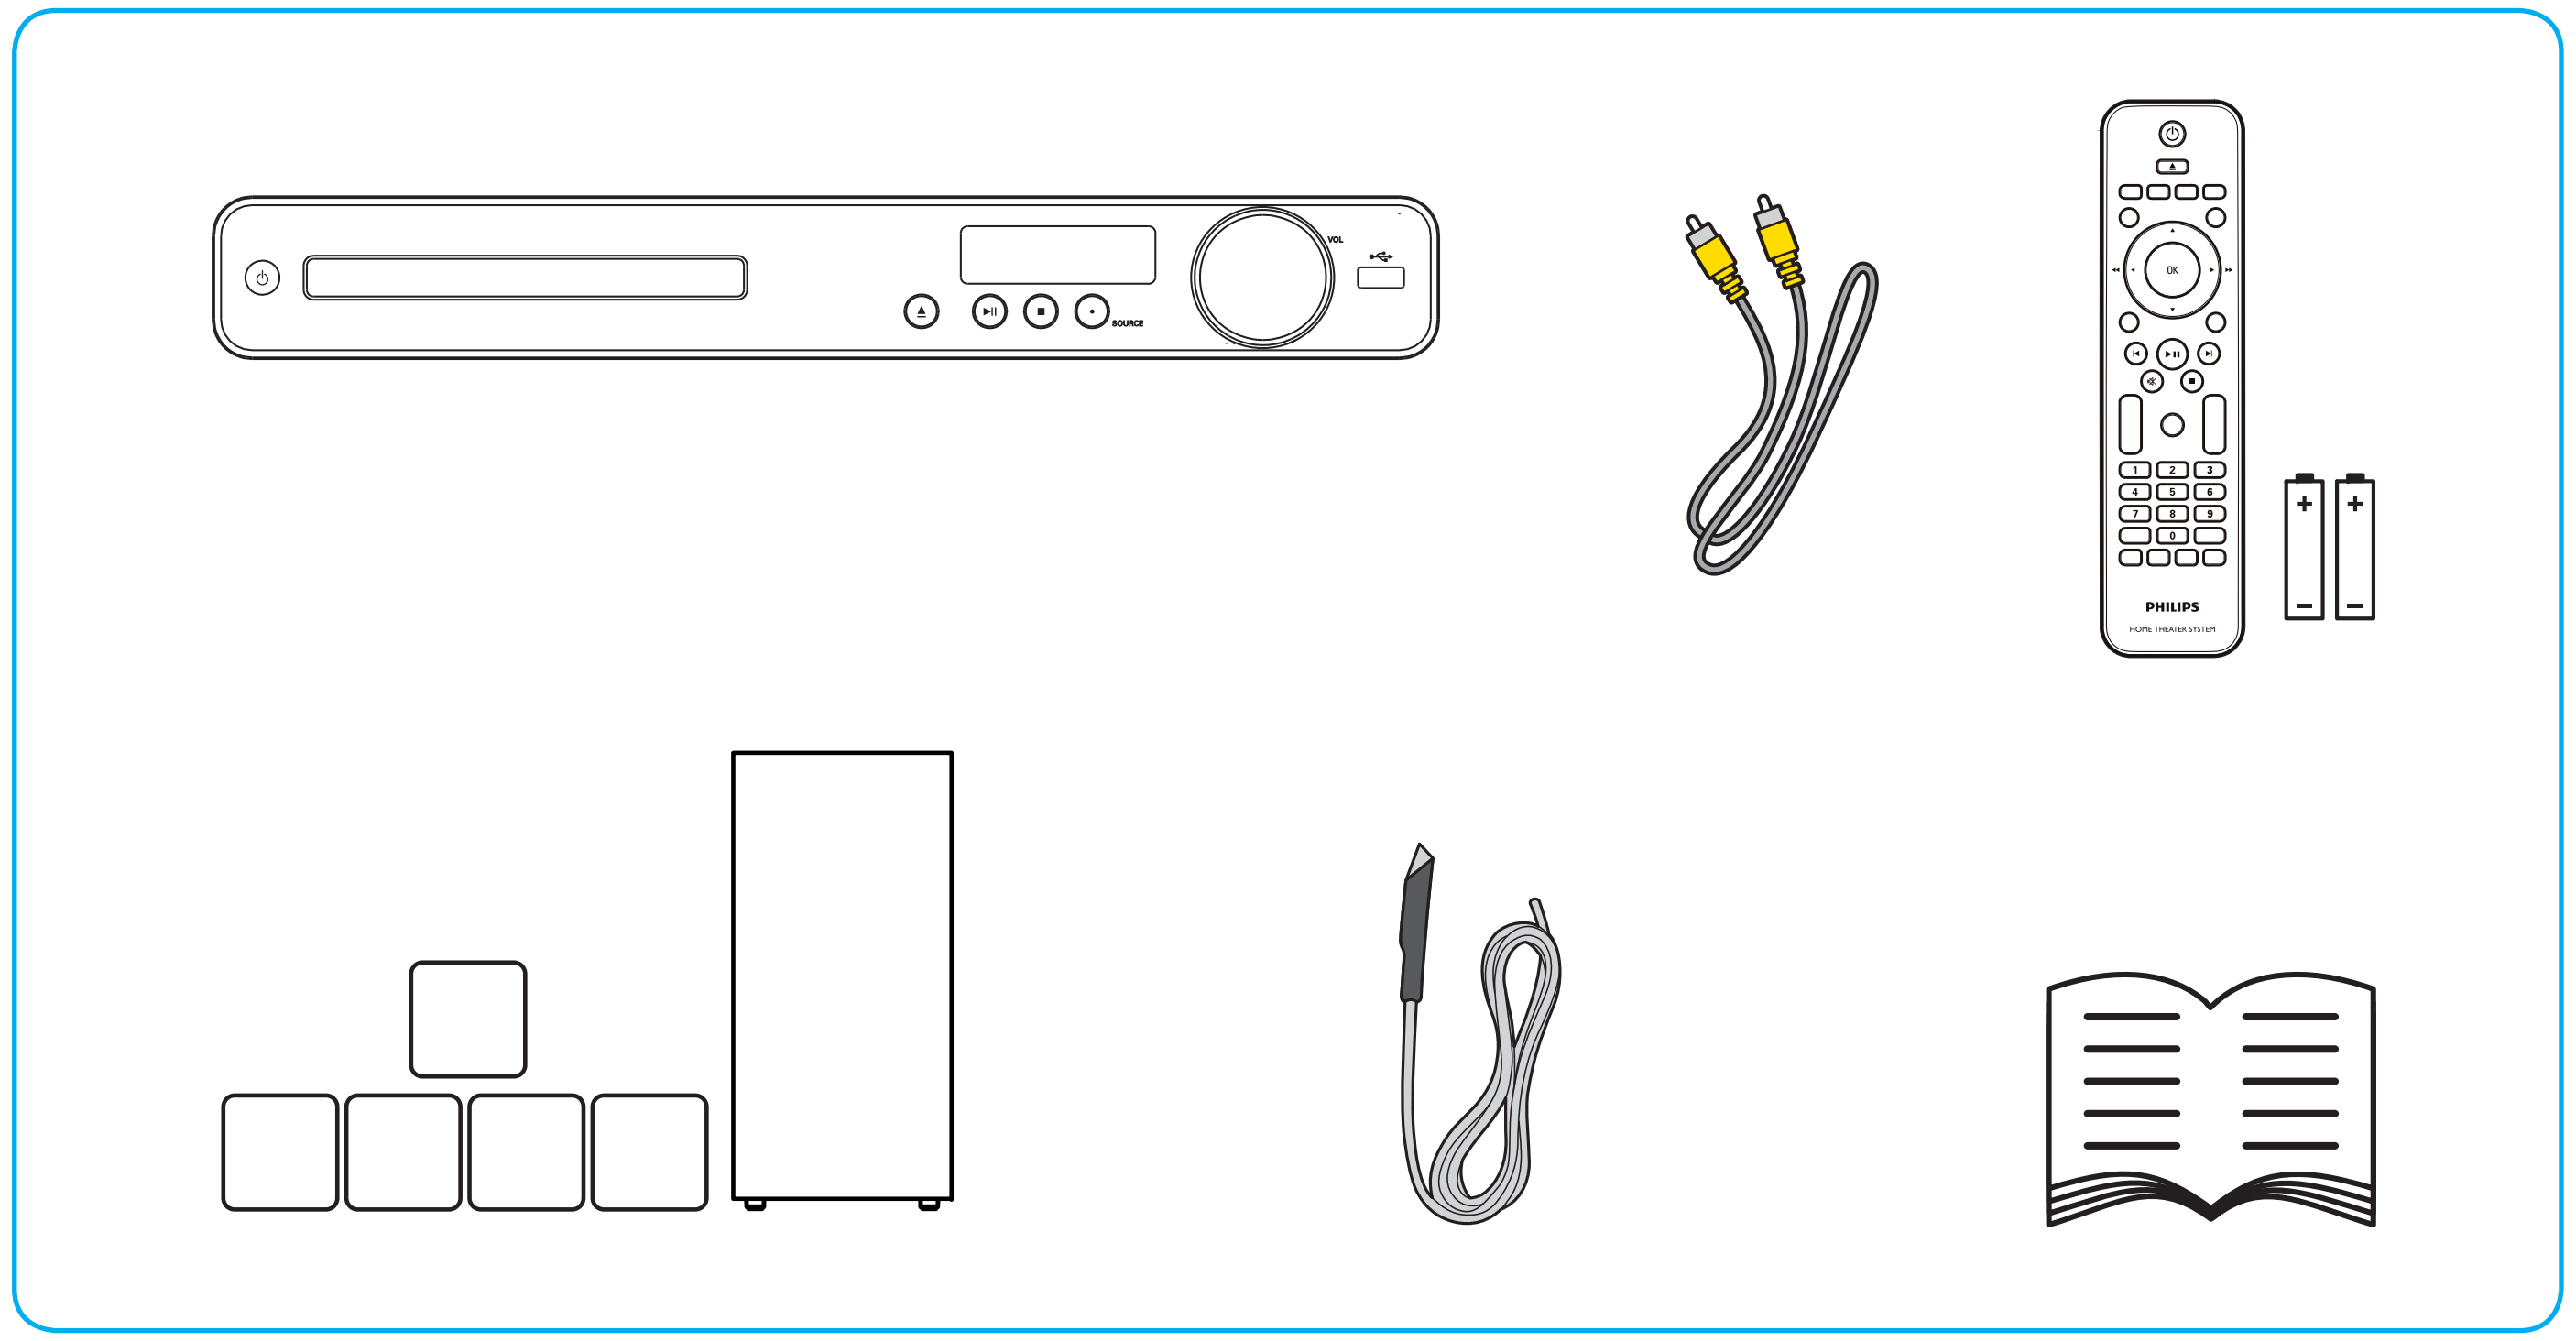

PHILIPS

1

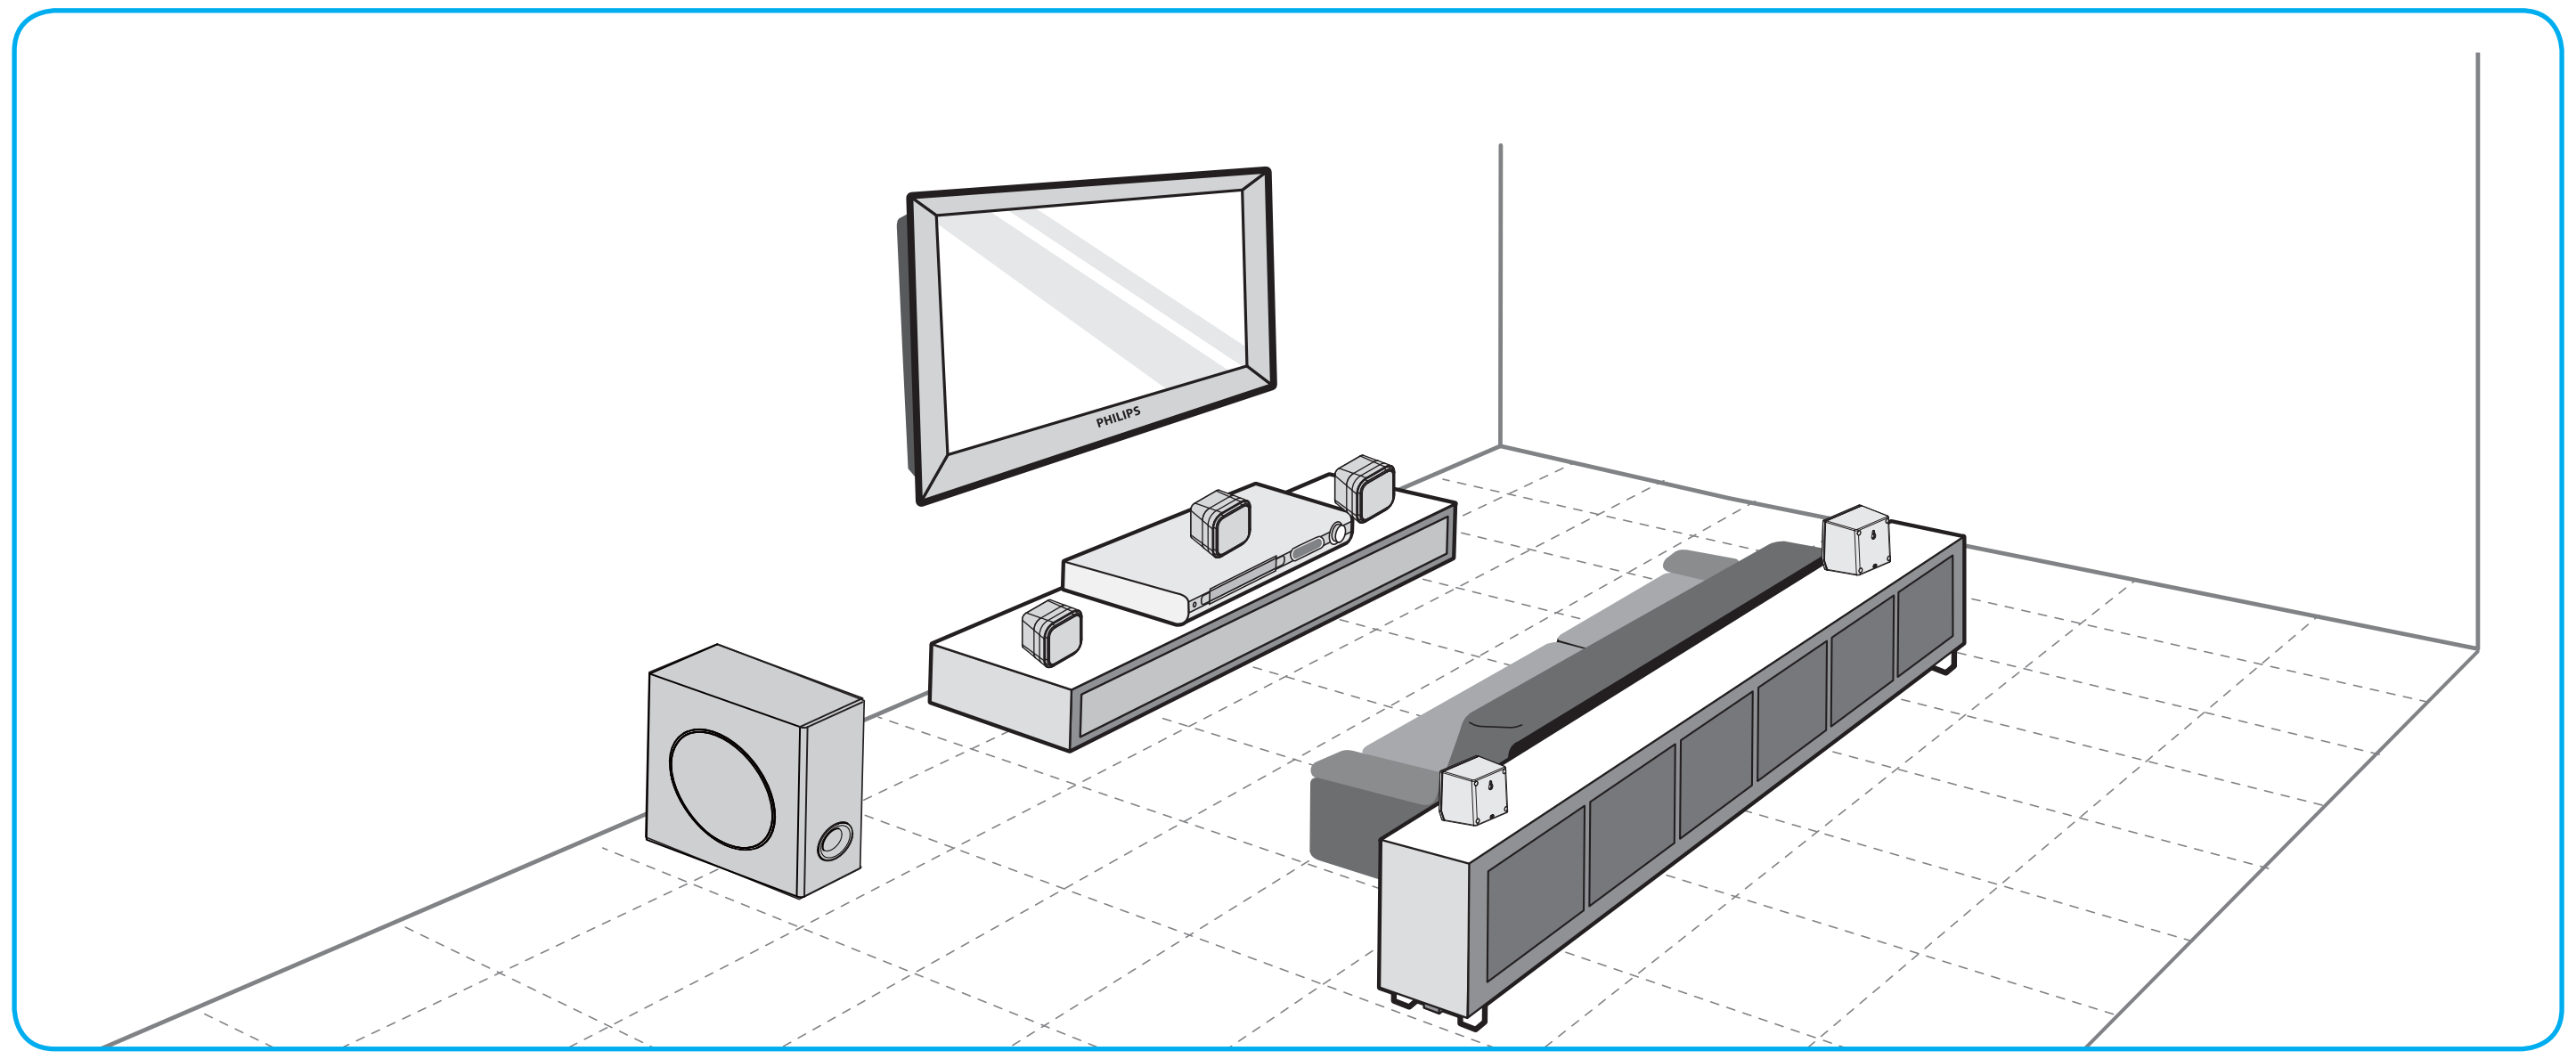


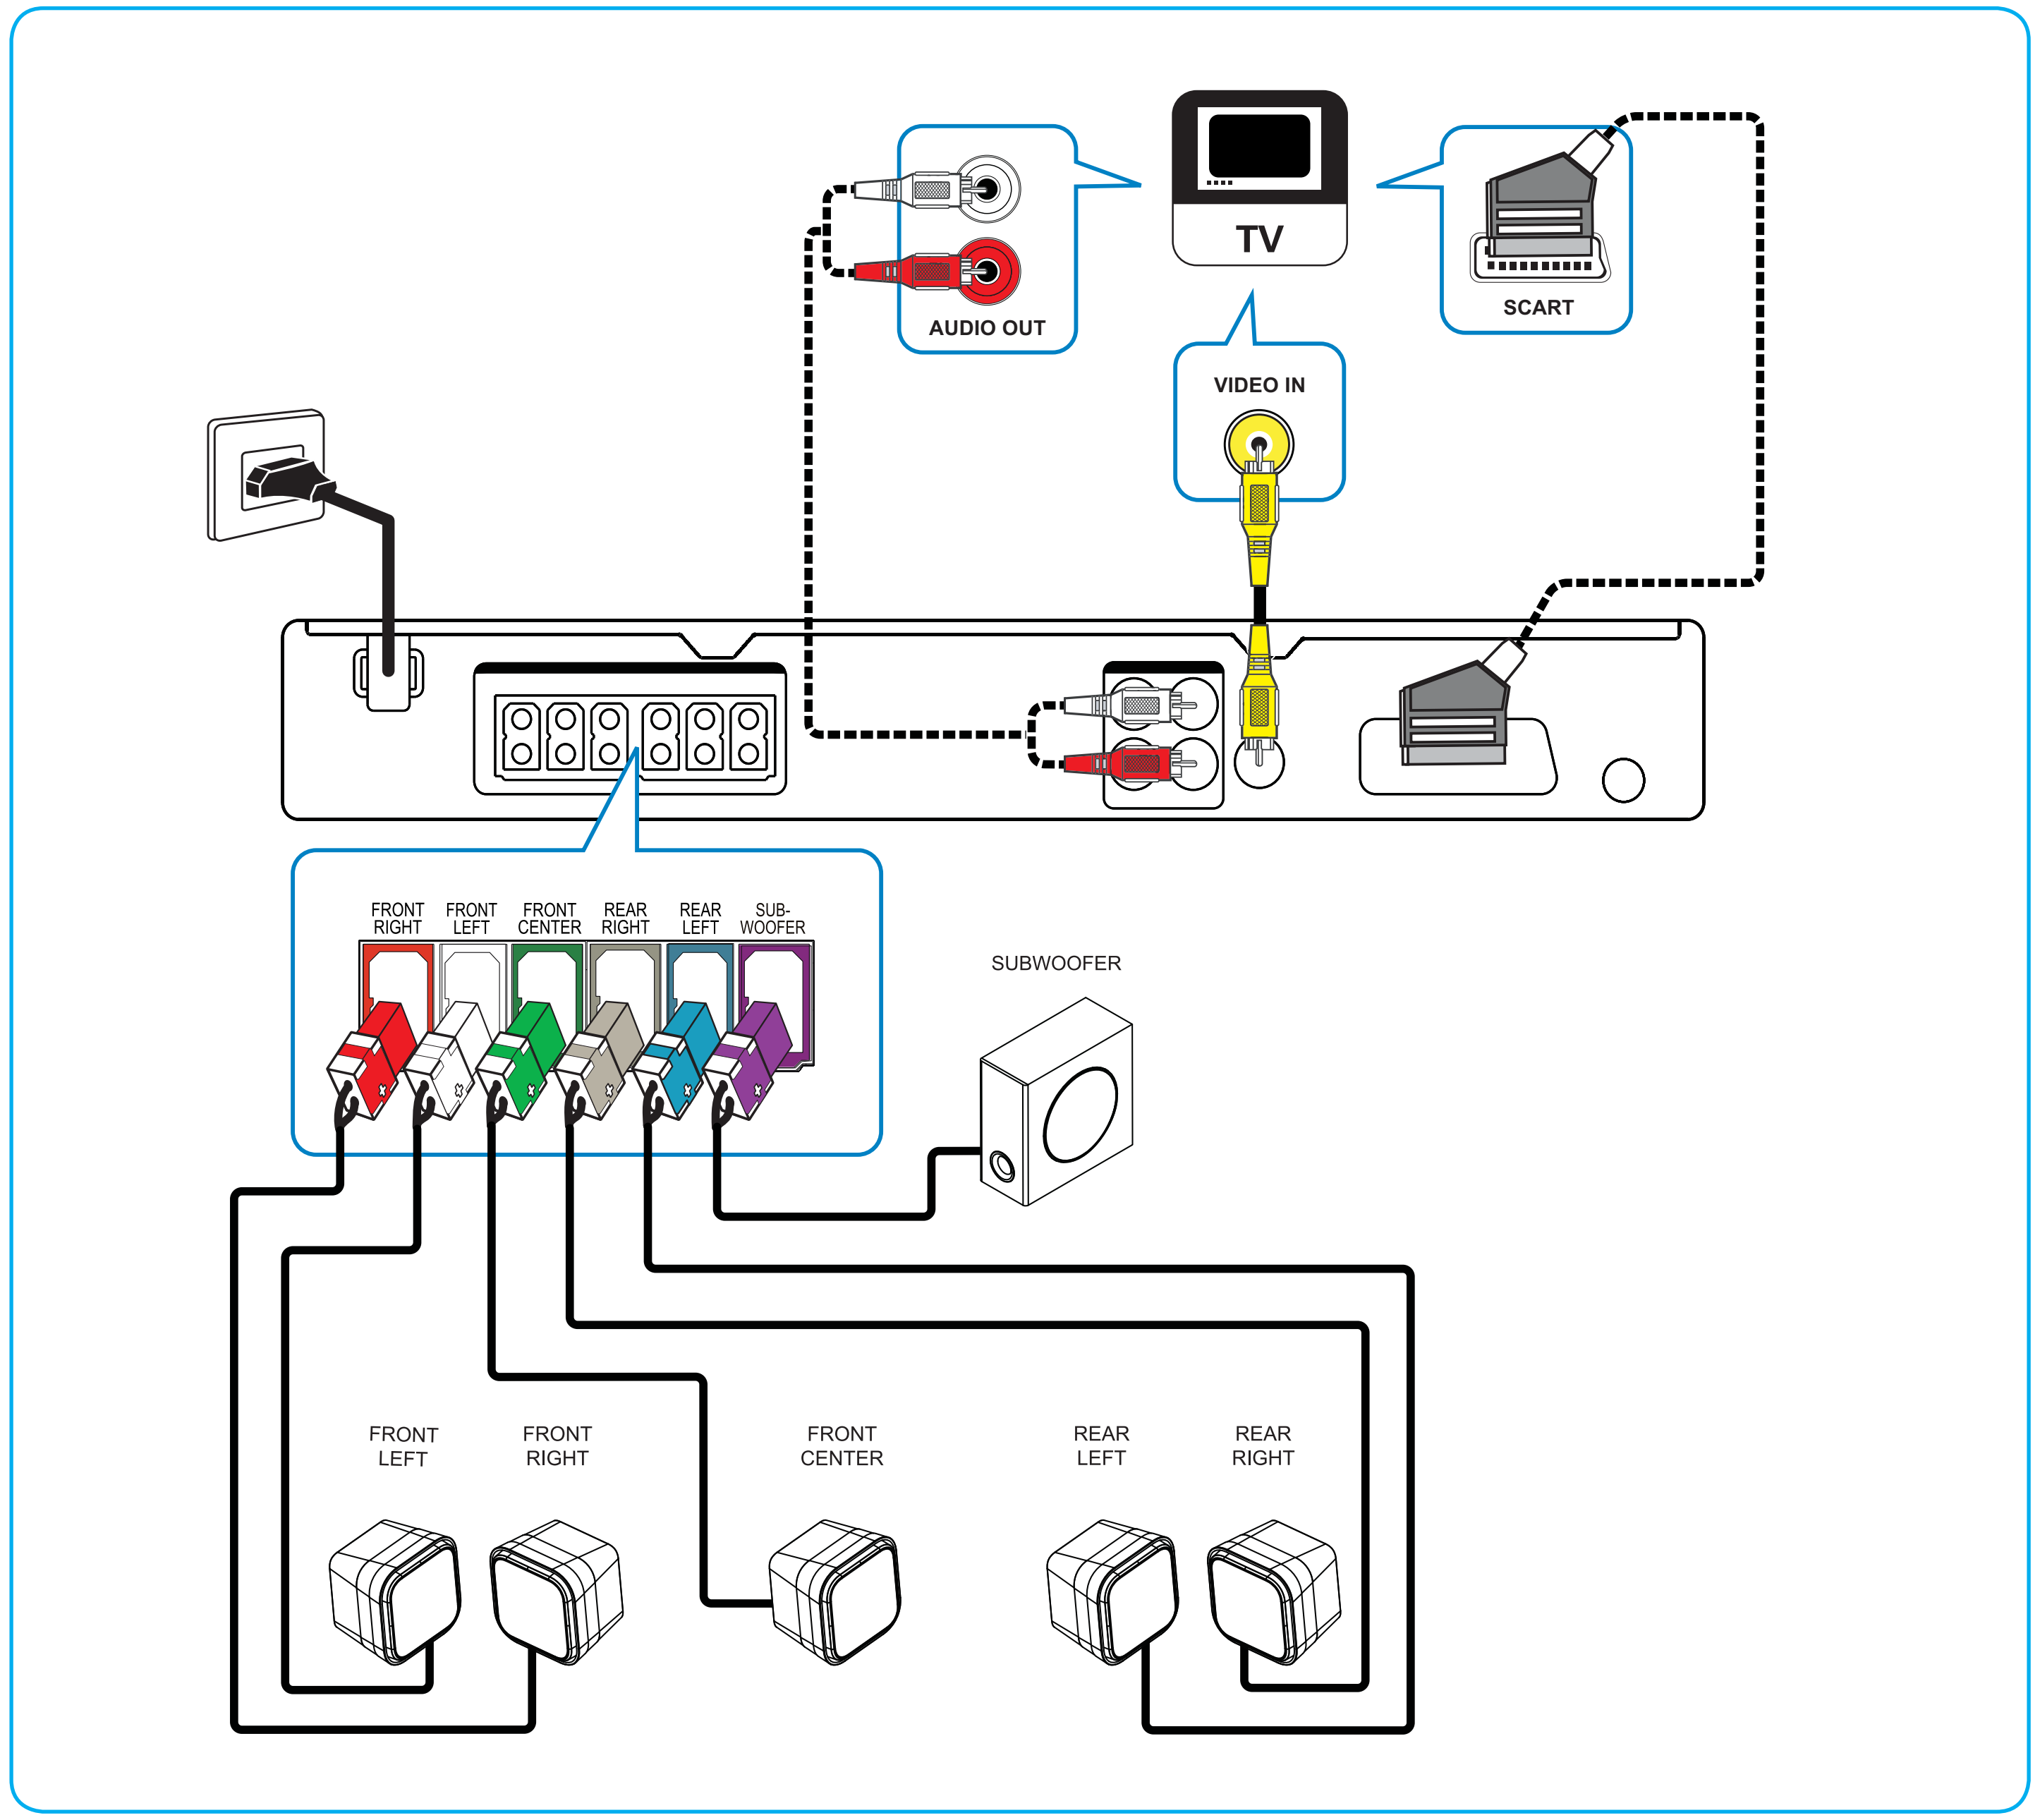


AUDIO OUT
TV
SCART
VIDEO IN
FRONT RIGHT
FRONT LEFT
FRONT CENTER
REAR RIGHT
REAR LEFT
SUB-WOOFER
SUBWOOFER
FRONT LEFT
FRONT RIGHT
FRONT CENTER
REAR LEFT
REAR RIGHT

2

1

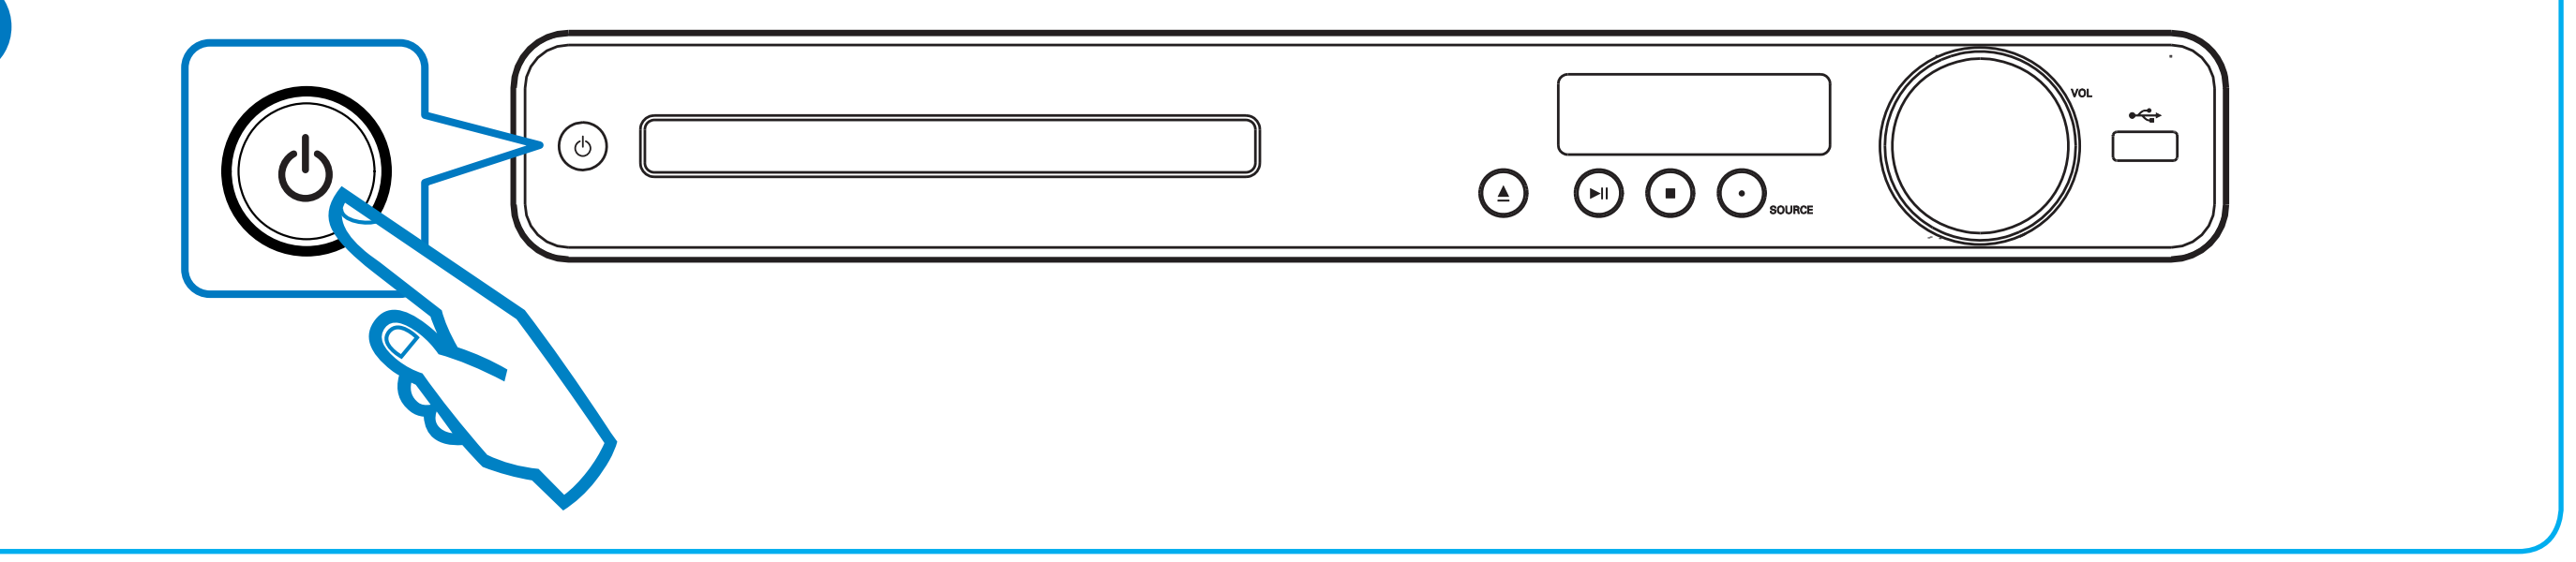


2

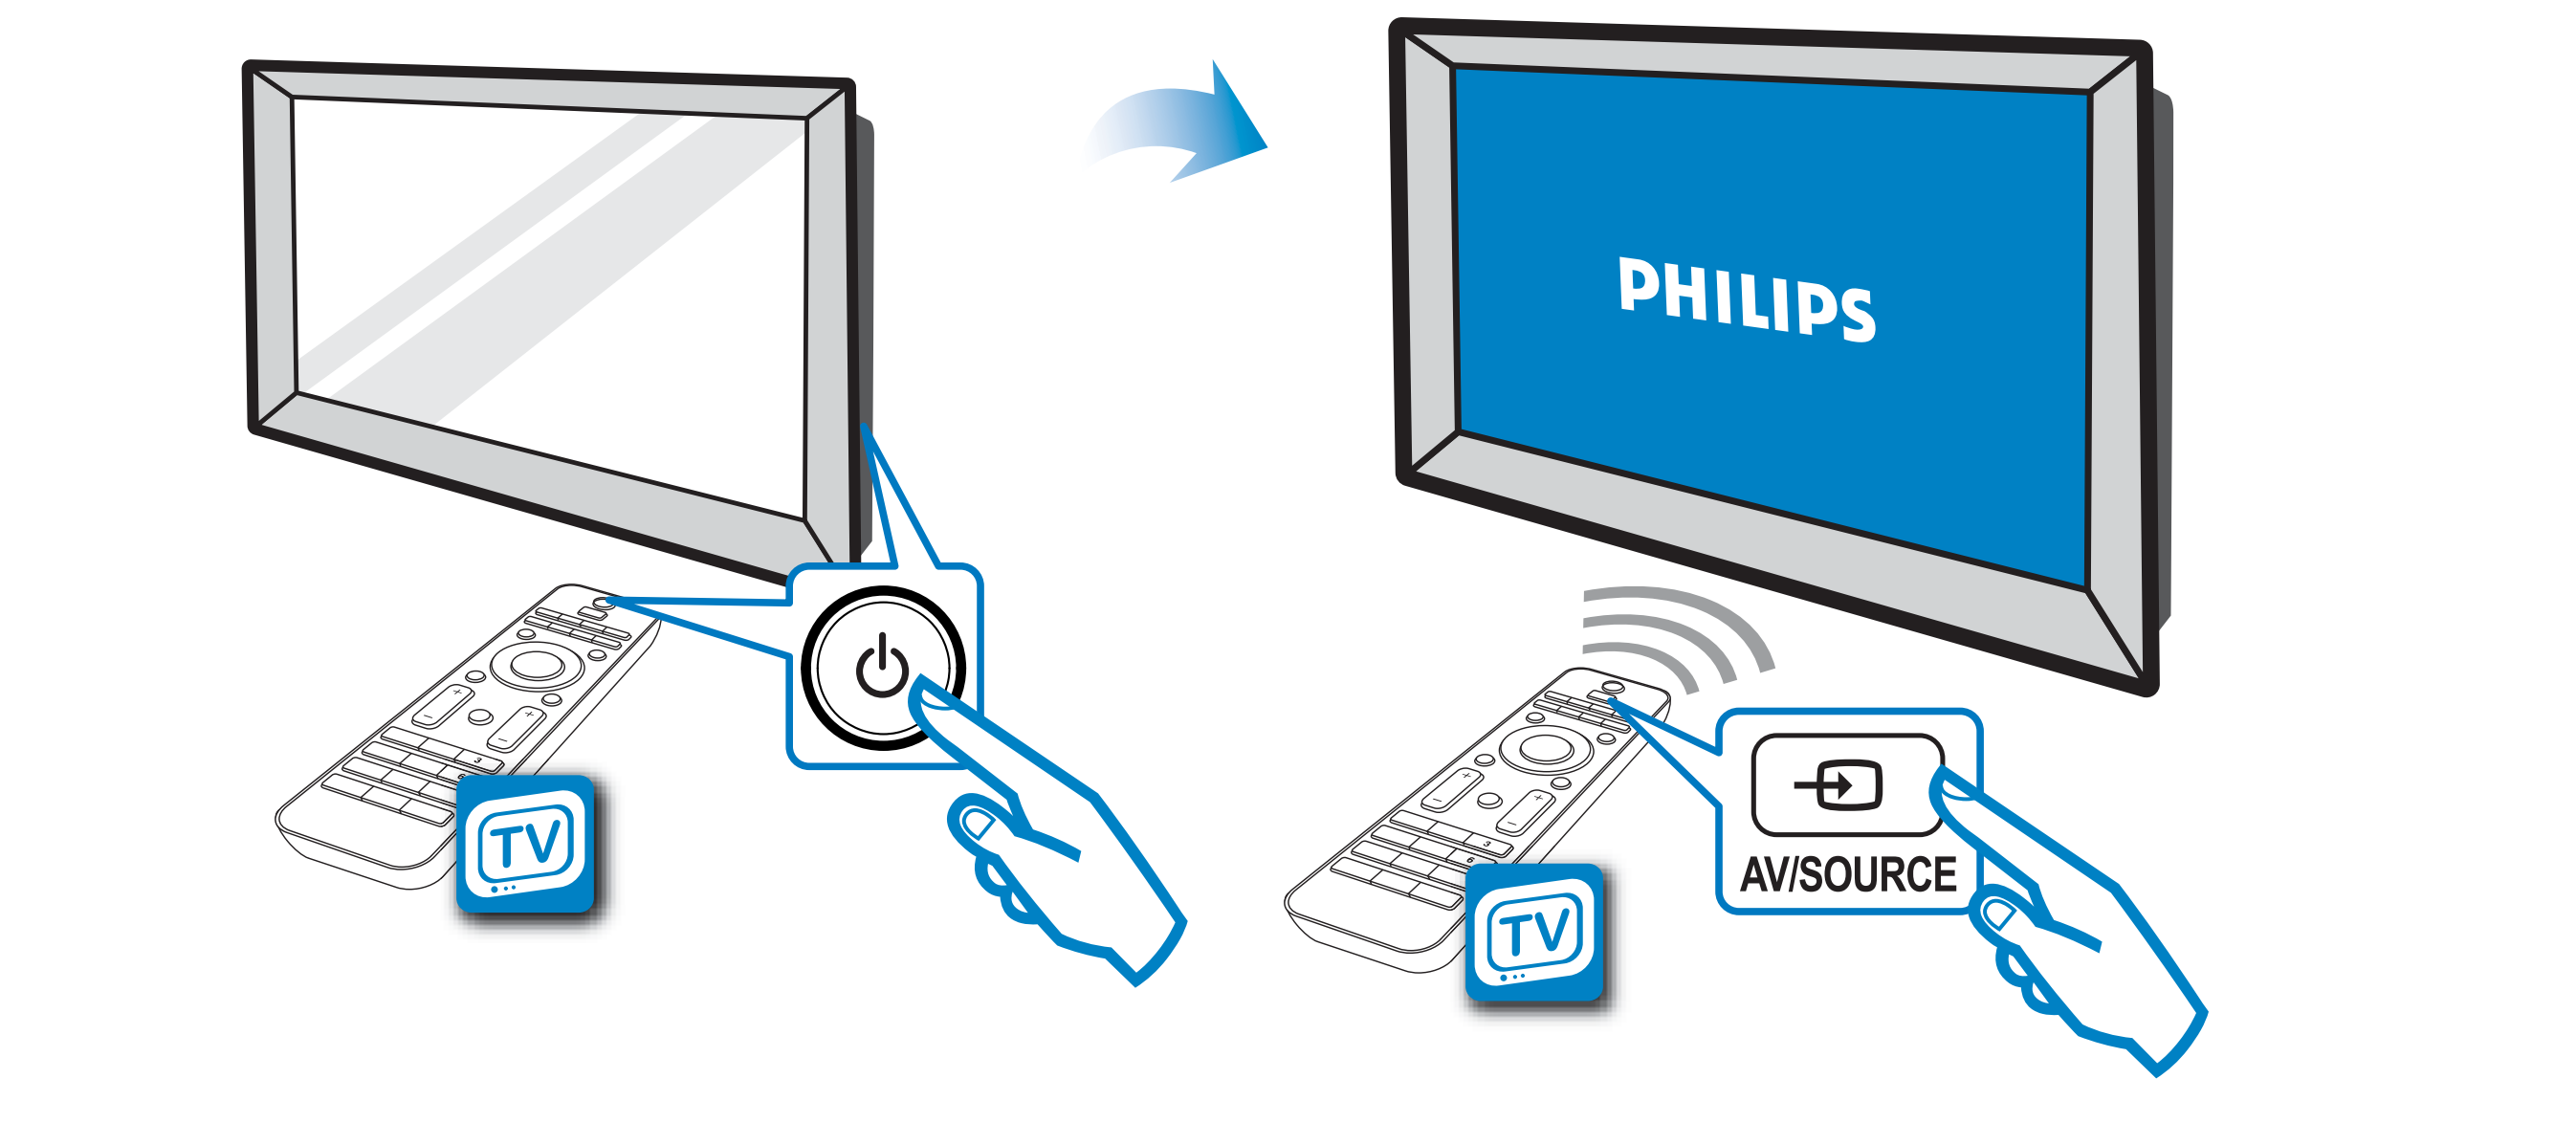

PHILIPS
TV
AV/SOURCE

3

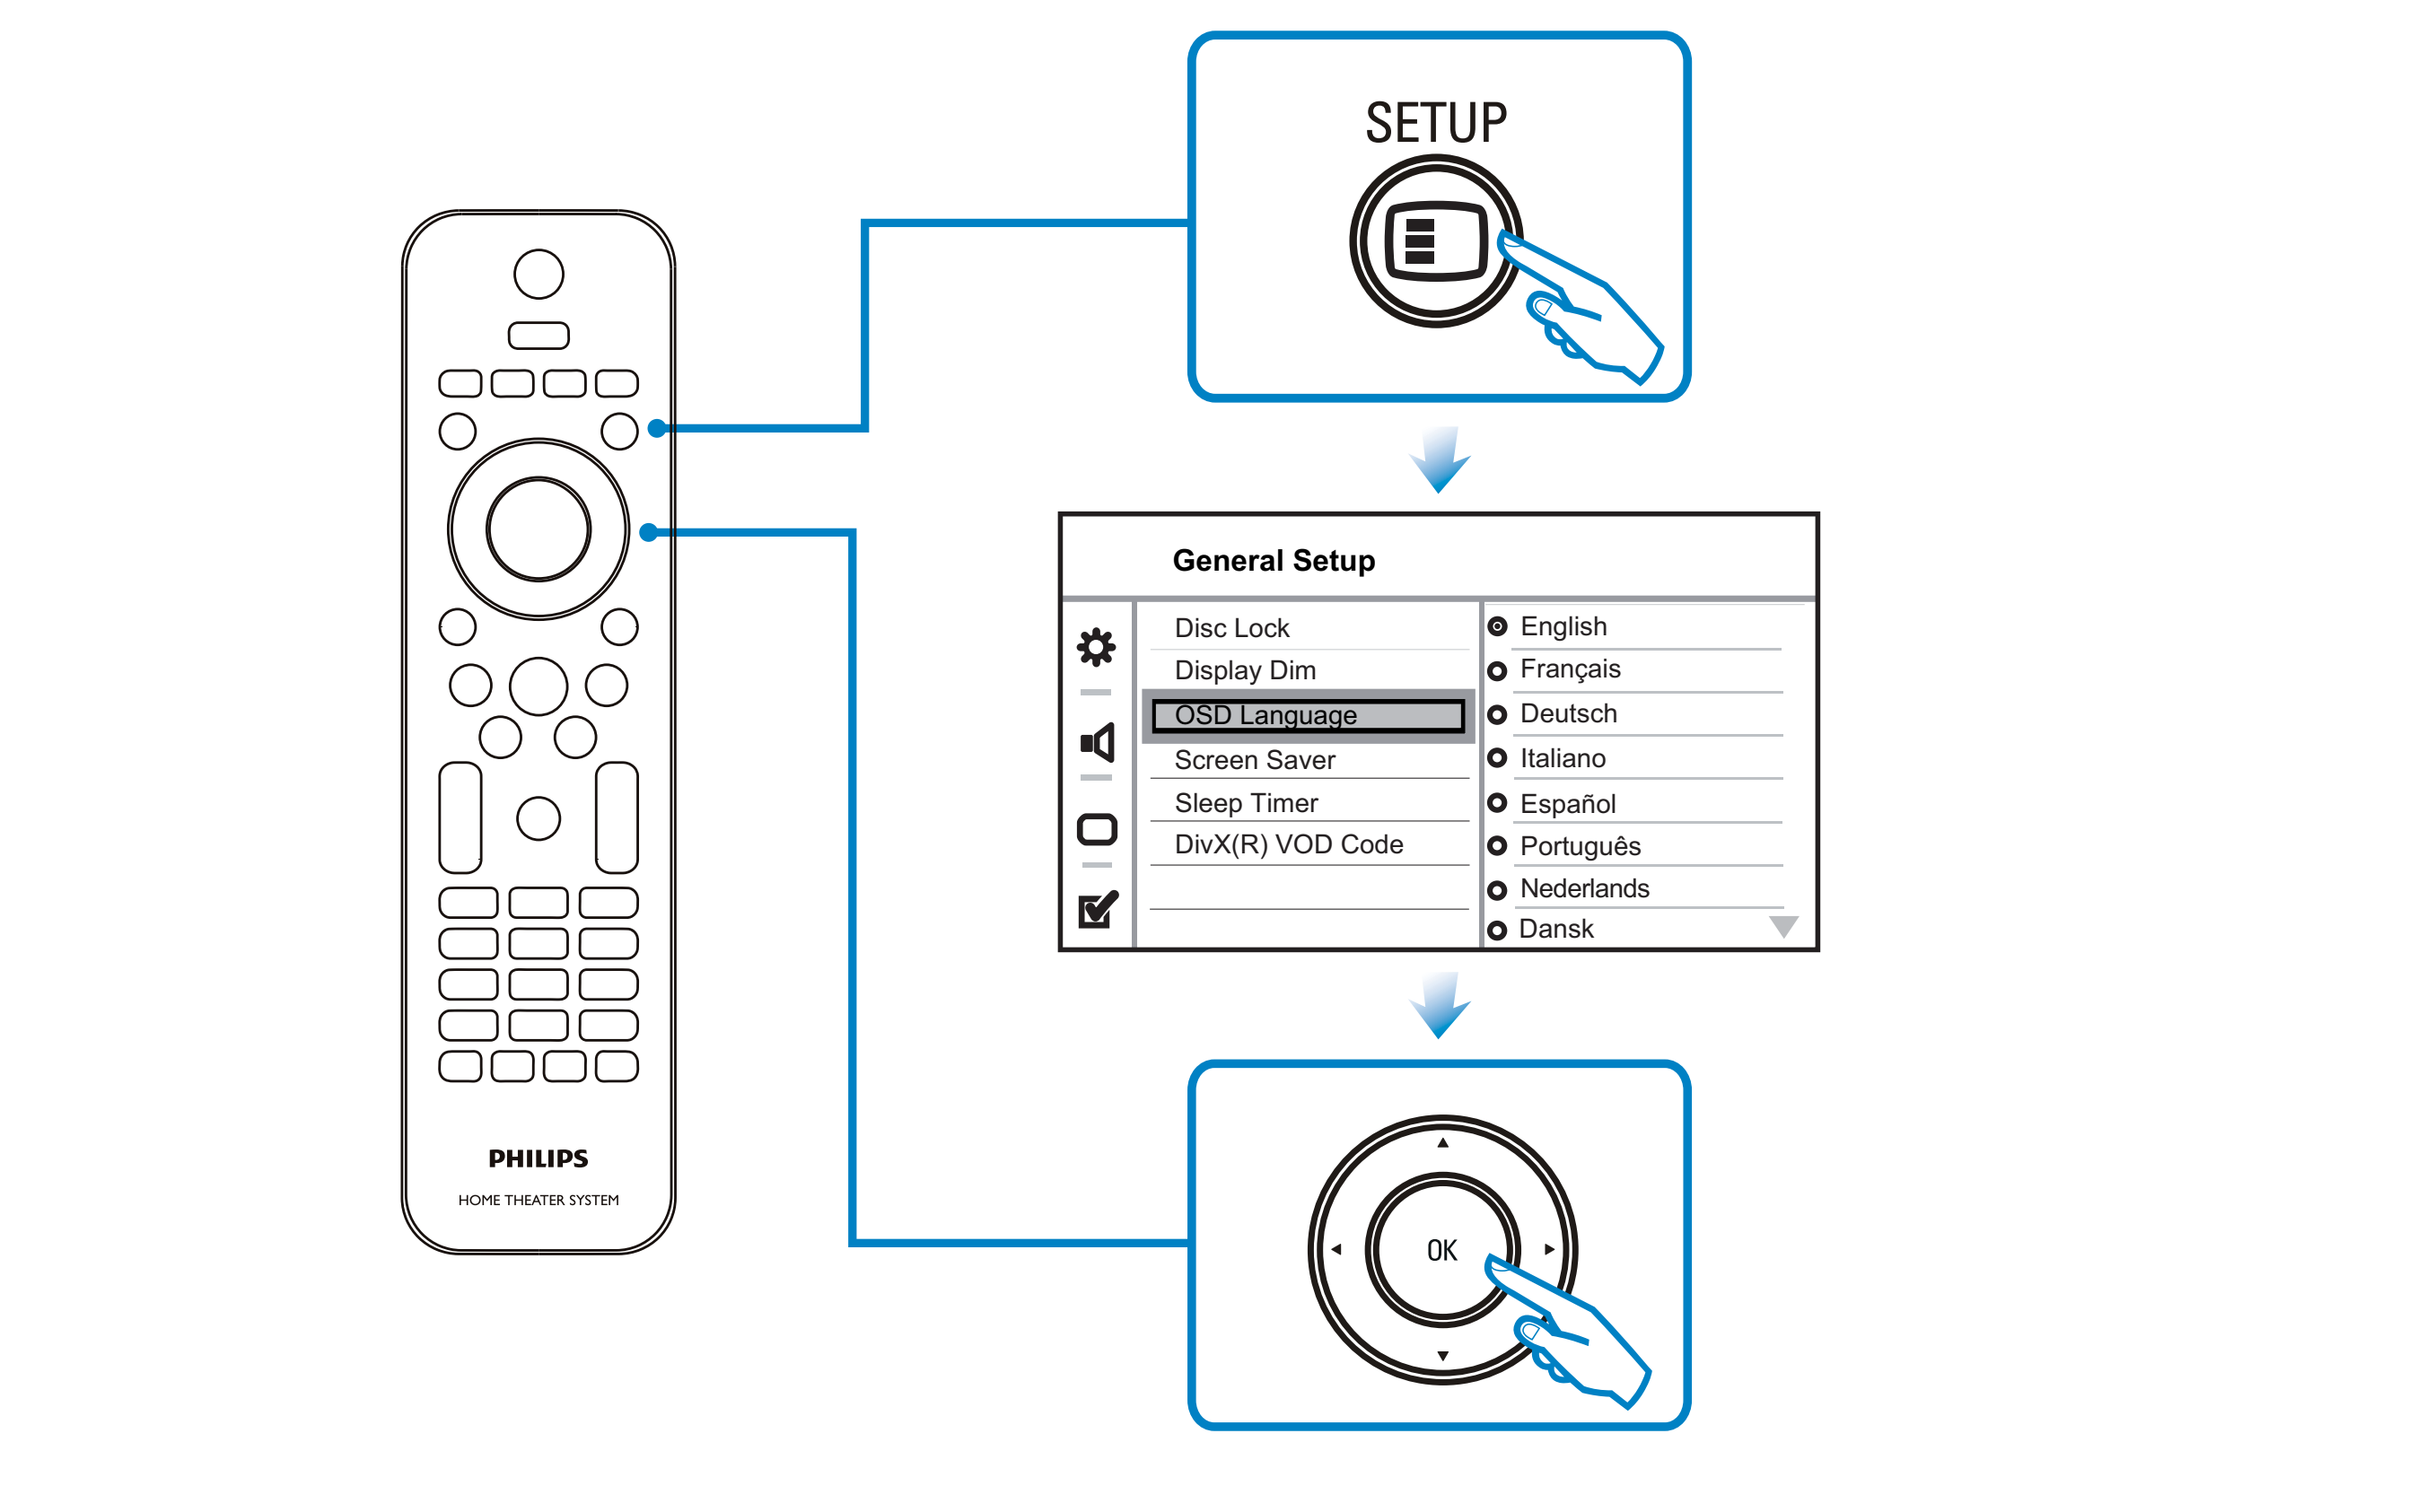

SETUP
General Setup
Disc Lock
Display Dim
OSD Language
Screen Saver
Sleep Timer
DivX(R) VOD Code
English
Français
Deutsch
Italiano
Español
Português
Nederlands
Dansk
OK
PHILIPS
HOME THEATER SYSTEM